



FRESH ROAST SR900

Instruction Manual



Dear User,

Thank you for choosing the **Fresh Roast SR900**.

We appreciate your trust in our products and are excited to be part of your coffee roasting journey. The SR900 has been designed to provide a flexible, reliable, and enjoyable home coffee roasting experience, whether you prefer simple manual control or advanced roasting with Roast-Tech software.

Please read this manual carefully before operating the roaster. Following the instructions and safety guidelines will help ensure safe operation, consistent roasting results, and years of dependable performance.

LEGAL DISCLAIMER & LIMITATION OF LIABILITY

The SR900 is a consumer-grade home appliance designed to roast green coffee beans under active user supervision.

Failure to follow the instructions, warnings, and safety information contained in this manual may result in unsafe operating conditions, damage to the appliance, or personal injury.

To the maximum extent permitted by law, Fresh Roast, Home Roasting Supplies, Roast-Tech, and their affiliates shall not be liable for incidental, indirect, or consequential damages arising from the use or misuse of the SR900, including but not limited to property damage, loss of use, or personal injury.

Roast-Tech software provides assistive controls, configuration options, and roast data visualization only. Roast-Tech does not replace user judgment, supervision, or physical control of the roaster.

Use of the SR900 and any associated software is at the user's own risk.

TABLE OF CONTENTS

Registering your SR900	01
Declaration of conformity	01
Symbols & markings	02
Safety instructions	02
Included components and accessories	03
Product overview	04
Technical specifications	05
Product description	06
Intended use & limitations	06
Quick start guide	07
Emergency procedure	12
Getting started	12
Assembly instructions	13
Initial setup & installation	14
Control panel & its description	15
Operating the SR900	16
Roast-Tech Settings	18
Roast profile management	19
Cleaning & maintenance	22
Storage & handling	23
Troubleshooting	24
Warranty	26

REGISTERING YOUR SR900:

Before using Roast-Tech:

1. Visit Roast-Tech.com and select Sign Up.
2. Check your email and follow the link to create your password.
3. Sign in, select Add Machine, and enter your SR900 information. Your serial number and MAC address are located on the label underneath the roaster base.



After registration, install Roast-Tech and connect your roaster.

DECLARATION OF CONFORMITY:

This product complies with applicable United States regulatory requirements and consumer safety requirements.



FCC Compliance (Part 15 of the FCC Rules)

This device complies with Part 15 of the FCC Rules. Operation is subject to the conditions stated in the FCC Compliance Statement included in this manual.



California Proposition 65

This product is subject to California Proposition 65 warning requirements. Refer to the Proposition 65 warning statement provided in the Safety Instructions section of this manual.

Note: Additional regulatory and compliance information may be available from the manufacturer upon request.

SYMBOLS & MARKINGS:

The following signals are used throughout this manual to indicate different levels of hazard:



DANGER

Indicates an imminently hazardous situation which, if not avoided, will result in serious injury.



HOT SURFACE

Indicates surfaces that may become hot during operation and may cause burns if touched.



ELECTRICAL HAZARD

Indicates the presence of electrical hazards and highlights important electrical safety precautions.

Note: Always read and follow all safety instructions and warnings provided in this manual before operating the product.

SAFETY INSTRUCTIONS:

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before using this appliance.
- The roaster becomes hot during operation. Do not touch hot surfaces. Use only the handles and controls provided.
- Allow the roaster to cool completely before moving or cleaning.
- To reduce the risk of electric shock, do not immerse the roaster, power cord, or plug in water or any other liquid.
- Unplug the roaster when not in use and before cleaning.
- Do not use the roaster if the power cord or plug is damaged or if the appliance malfunctions. Contact an authorized service provider.
- Use only manufacturer-approved accessories.
- For indoor household use only.
- Keep the power cord away from hot surfaces and do not let it hang over the edge of a table or counter.

- Place the roaster on a flat, stable, heat-resistant surface away from flammable materials and the edge of countertops. Do not operate it inside an enclosed space.
- Do not operate the roaster without coffee beans in the roast chamber.
- Roast only in a well-ventilated area, as coffee roasting produces smoke and airborne particulates.
- Empty the chaff collector after each roast to reduce the risk of fire.
- Never leave the roaster unattended during roasting or cooling. Coffee beans may ignite and require immediate intervention.
- If excessive smoke or overheating occurs:
 - Press the COOL button immediately.
 - If the condition persists, unplug the roaster.
 - Do not use water to extinguish a roasting fire.
 - Allow the roaster to cool completely before inspecting or using it again.
- Allow the cooling cycle to finish before unplugging the roaster.
- Keep the roaster and power cord out of reach of children.
- Use the roaster only for roasting coffee beans.



WARNING:

This product can expose you to chemicals, including acrylamide, which is known to the State of California to cause cancer.

For more information, visit www.P65Warnings.ca.gov.

INCLUDED COMPONENTS AND ACCESSORIES:

The Fresh Roast SR900 package includes the following components:

1. SR900 Roaster Base x1
2. Roast Chamber x1
3. Chaff Basket x1 and Top Cap x1
4. Power Cord (attached) x1
5. Bean Temperature Probe x1
6. User Manual x1

Inspect all items upon receipt. If any components are missing or damaged, do not operate the roaster and contact customer support.

PRODUCT OVERVIEW:



TECHNICAL SPECIFICATIONS:

This section provides technical specifications and reference information for the Fresh Roast SR900.

Specification	Description
Product Name	Fresh Roast SR900
Product Type	Electric Coffee Bean Roaster
Intended Use	Household Coffee Roasting Appliance
Operating Environment	Indoor Use Only
Rated Voltage	120 V AC
Frequency	60 Hz
Power Source	Single-Phase Household Electrical Supply
Recommended Circuit	Dedicated, Properly Grounded Wall Outlet
Minimum Ambient Operating Temperature	55°F (13°C)
Operating Environment Requirements	Dry, Well-Ventilated Indoor Location
Humidity Requirements	Non-Condensing Conditions

Additional Reference Information

- The SR900 is designed exclusively for roasting green coffee beans.
- Roast-Tech software support is optional and does not affect the roaster's ability to operate using onboard controls.
- Specifications are subject to change without notice as part of ongoing product improvements.

PRODUCT DESCRIPTION:

The Fresh Roast SR900 is a fluid-bed coffee roaster designed for roasting green coffee beans in small batches. The roaster uses a combination of heated air and adjustable airflow to circulate and roast coffee beans, giving the user direct control over the roasting process.

The SR900 features independently adjustable heat and fan controls, allowing users to customize roast development according to their preferences. Roast progress can be monitored through the transparent roast chamber, enabling visual observation of bean color and movement throughout the roast cycle.

The roaster includes an integrated cooling cycle that rapidly cools roasted coffee beans at the end of the roast process. Proper cooling helps preserve roast quality and reduces the risk of overdevelopment after roasting.

The SR900 may be operated using its onboard control panel or through the compatible Roast-Tech application. Roast-Tech provides additional functionality, including roast monitoring, profile management, data logging, and control from a compatible device.

INTENDED USE & LIMITATIONS:

Intended Use

The SR900 is intended for indoor residential use only and must be operated by an attentive user in accordance with the instructions provided in this manual.

Use Limitations

The Fresh Roast SR900 is not intended for:

- Commercial or industrial coffee roasting
- Continuous-duty operation
- Use by children
- Roasting any material other than green coffee beans
- Operation in wet, damp, or high-humidity environments
- Operation inside cabinets, closets, or other enclosed spaces
- Modification of the roaster, including its hardware, firmware, electrical systems, safety features, or accessories

Use of the SR900 outside its intended scope may result in unsafe operating conditions, damage to the appliance, property damage, personal injury, and/or voiding of the warranty.

QUICK START GUIDE:


Step 1: Load the Beans

1. Install the Roast Chamber and Temperature Probe.
2. Add 8 oz (225 g) of green coffee beans.
3. Install the Chaff Basket
4. Install the Top Cap.




Step 2: Power On

1. Press the physical "ON / HOLD OFF" button.

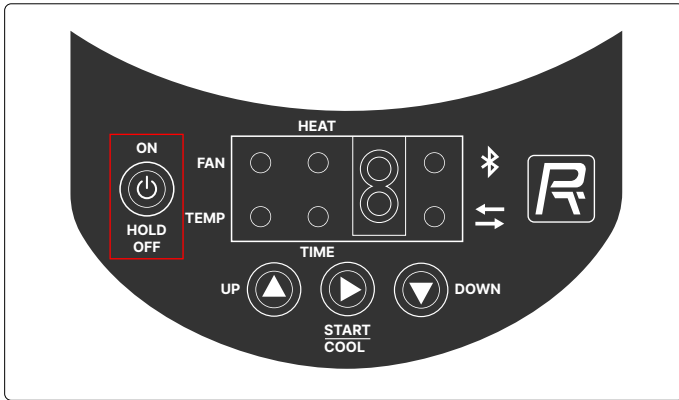


2. Launch Roast-Tech on your compatible device with Bluetooth enabled. Verify the SR900 displays "CONNECTED" before proceeding.

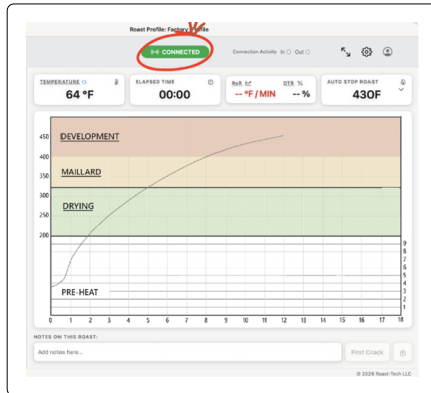

Step 3: Start the Roast

1. Click the “START PROFILE ROAST” option in Roast-Tech.

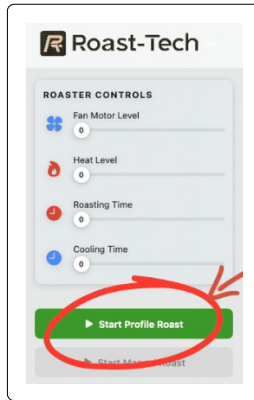


2. The default profile will automatically control heat and fan settings throughout the roast.
3. Monitor the roast continuously.

Important: Roast-Tech is an assistive tool. Never leave the roaster unattended.

Step 4: Listen for First Crack

1. Listen for the first popping sounds. Once this is heard, click the “FIRST CRACK” option on the bottom right.

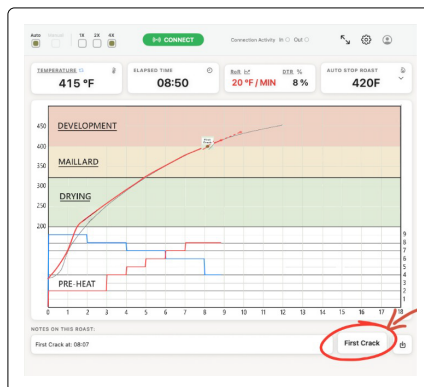


Step 5: When to Start Cooling

As the coffee roasts, it will eventually begin making popping sounds similar to popcorn. This stage is called First Crack.

For your first roast:

1. Listen for the first few pops of First Crack.
2. Continue roasting for approximately 60–90 seconds after First Crack begins.
3. Click the "START COOL DOWN" option in Roast-Tech.

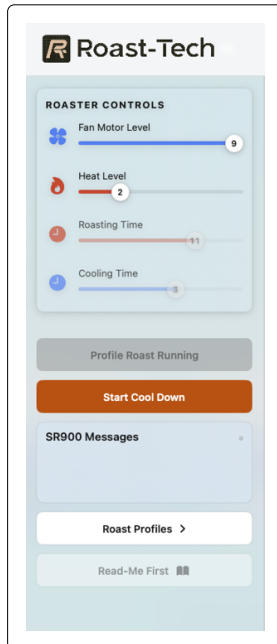

This will typically produce a balanced medium roast and is a good starting point for most coffees.

Roast Preference Guide:

- **Lighter Roast:** Click "START COOL DOWN" in the Roast-Tech shortly after First Crack begins.
- **Medium Roast:** Click "START COOL DOWN" in the Roast-Tech approximately 60–90 seconds after First Crack begins.
- **Darker Roast:** Click "START COOL DOWN" in the Roast-Tech approximately 90–120 seconds after First Crack begins.

Roast times will vary based on the coffee, ambient temperature, voltage supply, and altitude.

New User Recommendation: For the first roast, continue roasting for approximately 60 seconds after First Crack begins, then press the "START COOL DOWN" option in Roast-Tech. This will typically produce a balanced roast and provide a reliable starting point for learning your preferred roast level.

Step 6: Complete Cooling and Remove the Beans

1. Allow the cooling cycle to complete.
2. Carefully remove the roast chamber.
3. Allow beans to cool completely before storage.


After Roasting

- Empty the chaff basket after every roast.
- Allow the roaster to cool completely before storing.
- Wait approximately 15–20 minutes before starting another roast.

EMERGENCY PROCEDURE:

If excessive smoke, overheating, or a chaff fire is suspected:

1. Press the physical "START / COOL" button.

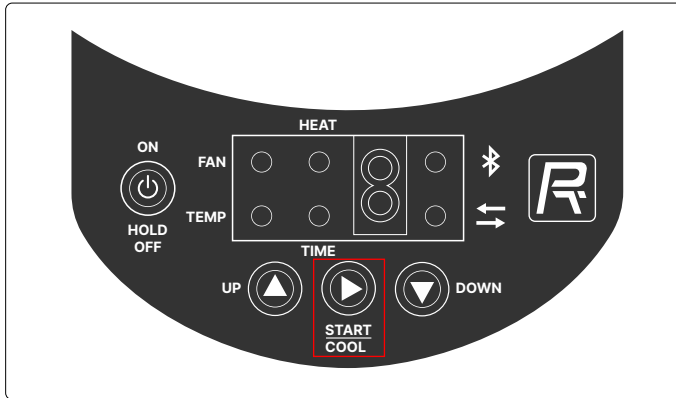

2. If smoke or overheating continues, unplug the roaster.
3. Do not use water.
4. Allow the machine to cool fully.
5. Inspect the roast chamber and chaff basket before the next use.

Roast results may vary based on coffee origin, bean density, ambient temperature, voltage supply, and altitude. The factory default profile is intended as a starting point for new users.

GETTING STARTED:

Before using the Fresh Roast SR900 for the first time, complete the following steps:

1. Remove all packaging materials, protective films, labels, and adhesive tape from the roaster and its components.
2. Verify that all components are present, properly assembled, and free from visible damage.
3. Read this User Manual carefully, paying particular attention to the Safety Instructions section before operating the roaster.

ASSEMBLY INSTRUCTIONS:

Before operating the Fresh Roast SR900, ensure all components are properly assembled.

Step 1: Install the Roast Chamber

Insert the roast chamber into the roaster base and rotate it until it locks securely into position.

Step 2: Install the Temperature Probe

- Insert the bean temperature probe into the probe port located on the side of the roast chamber. Ensure the probe is fully seated.
- Connect the probe cable to the probe jack located on the roaster base.

Step 3: Load Green Coffee Beans

- Add the desired quantity of green coffee beans to the roast chamber.
- For best results, load approximately 8 oz (225 g) of green coffee beans.

Note: The factory default roast profile is based on a bean load of approximately 8 oz (225 g).

Step 4: Install the Chaff Basket

Place the Chaff Basket onto the roast chamber and ensure the Chaff Basket is seated properly.

Step 5: Install the Top Cap

Place the Top Cap onto the Chaff Basket and verify that the Top Cap is seated securely.

INITIAL SETUP & INSTALLATION:

Before operating the Fresh Roast SR900, ensure the installation location meets the following requirements.

Placement & Ventilation

- Place the roaster on a flat, stable, heat-resistant surface away from the edge of tables and countertops.

Note: Do not operate the roaster inside a cabinet, closet, or other enclosed space.

- Coffee roasting produces smoke and airborne particulates. Provide adequate ventilation using one or more of the following:
 - An open window with sufficient airflow
 - A ventilation fan
 - A dedicated exhaust system that directs smoke outdoors

Electrical Power Recommendation


- The SR900 requires a standard 120 V AC household electrical supply. Connect the roaster directly to a properly grounded wall outlet.
- Route the power cord so that it does not contact hot surfaces and does not create a tripping hazard.

Ambient Operating Conditions

- Operate the SR900 only when the ambient temperature is 55°F (13°C) or higher.
- For best roasting performance, avoid operating the roaster in cold, drafty, or windy environments. Do not expose the roaster to rain, moisture, or excessive humidity.

CONTROL PANEL & ITS DESCRIPTION:

The Fresh Roast SR900 is operated using the controls and indicators located on the front control panel.

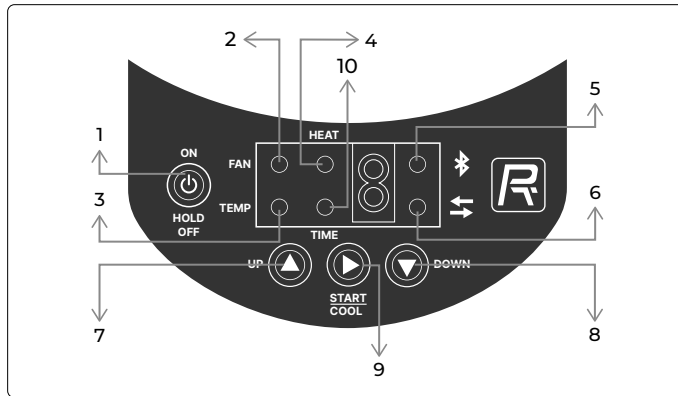

1. **ON / HOLD OFF Button:** Used to power the roaster on or off.
2. **FAN Indicator LED:** Indicates that the numeric display is showing the current fan setting. When selected, the fan setting may be adjusted using the "UP" and "DOWN" buttons.
3. **TEMP Indicator LED:** Indicates that the numeric display is showing the bean temperature measured by the installed temperature probe.
4. **HEAT Indicator LED:** Indicates that the numeric display is showing the current heat setting. When selected, the heat setting may be adjusted using the "UP" and "DOWN" buttons.
5. **Bluetooth Indicator LED:** Illuminates when the SR900 is connected to Roast-Tech software via Bluetooth.
6. **Communication Indicator LED:** Illuminates when active data communication is occurring between the SR900 and Roast-Tech software.
7. **UP Button:** Increases the value of the currently selected operating parameter.
8. **DOWN Button:** Decreases the value of the currently selected operating parameter.
9. **START / COOL Button:** Starts the roast cycle or initiates the cooling cycle during roasting.
10. **TIME Indicator LED:** Indicates that the numeric display is showing the remaining roast time.

Note: Only the parameter identified by the illuminated indicator LED may be adjusted using the "UP" and "DOWN" buttons. All physical controls remain functional regardless of software connection status.

OPERATING THE SR900:

The Fresh Roast SR900 can be operated in two different ways:

- A. Standalone Roasting Using the Physical Controls
- B. Roast-Tech Assisted Roasting

A. STANDALONE ROASTING USING THE PHYSICAL CONTROLS

The SR900 can be operated without Roast-Tech software. Before starting, ensure the roaster is correctly assembled.

1. Press the "ON / HOLD OFF" button. The display will illuminate.
2. Press the "START / COOL" button to begin roasting.
 - If no roast profile has been stored, the factory default profile is used.
 - If a Roast-Tech profile has been transferred, it remains stored in the roaster until replaced.

Note: The SR900 stores one roast profile internally.

3. During roasting, monitor bean movement and ensure the beans remain in active circulation within the roast chamber.
4. Observe roast progress using the display, bean temperature reading, bean color, aroma, and audible roast events. Never leave the roaster unattended during operation.
5. To adjust Fan or Heat, wait until the corresponding indicator is illuminated, then press the "UP" or "DOWN" buttons to make adjustments.

Note: Only the parameter associated with the illuminated indicator LED may be adjusted.

6. When the desired roast level has been reached, press the "START / COOL" button to begin the cooling cycle.
7. After the cooling cycle is completed, press and hold the "ON / HOLD OFF" button for approximately 3 seconds to power off the roaster.

Caution: If residual heat is detected, the roaster may automatically restart the cooling cycle. This is normal operation. Allow any additional cooling cycle to complete before handling the roaster.


B. Roast-Tech Assisted Roasting

Roast-Tech is an optional application for controlling the SR900, managing roast profiles, and monitoring roast data. The roaster can be operated using either Roast-Tech or its onboard controls. The physical controls remain functional at all times.

Roast-Tech is available for Windows, macOS, compatible iPhone and iPad devices.

Before starting, ensure the roaster is correctly assembled.

1. Download and install "Roast-Tech" on a supported device.
2. Place the assembled roaster on a flat, stable, heat-resistant surface and connect it to a grounded 120 V AC outlet.
3. Press the "ON / HOLD OFF" button to power on the roaster.
4. Open the "Roast-Tech" application and enable Bluetooth on your device. When the roaster is detected, connect to it. The BLE status indicator will turn green and display "Connected".

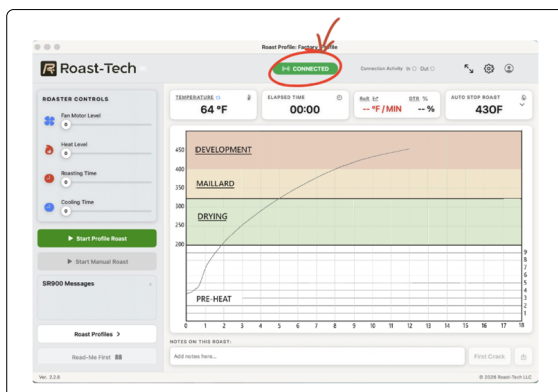

5. Select the desired roast profile or manual settings, then start roasting.
6. Monitor roast progress using the Roast-Tech display and the beans' appearance.
7. To stop roasting and begin cooling, select the cooling function within Roast-Tech or press the physical "START / COOL" button on the roaster.
8. After cooling is completed, press and hold the "ON / HOLD OFF" button for approximately 3 seconds to power off the roaster.

Important: If Bluetooth disconnects during a profile roast, the SR900 will continue running the profile stored on the roaster. The physical controls remain available for adjustments or to begin cooling.

Note: Only one SR900 may be actively connected to a device at a time.

ROAST-TECH SETTINGS:

Select the Settings (Gear) icon on the Roast-Tech main screen to access the Settings menu.

The Settings menu allows you to customize software preferences, roaster settings, and firmware options. Available settings include:

- Language
- Temperature Units
- Thermistor Selection
- Graph Preferences
- Altitude Setting
- Voltage Supply Setting
- Firmware Updates

Select Send Settings to Roaster to save any changes that affect roaster operation.

Important: Settings do not replace active user monitoring. Always monitor the roaster during operation.

Voltage Supply Setting

Select the option that best matches the outlet voltage used for roasting:

- Low – Less than 113 V
- Average – 113 V to 118 V
- High – Greater than 118 V

For best results, use a properly grounded wall outlet.

If the roast progresses slower than expected, select a lower Voltage Supply setting. If the roast progresses faster than expected, select a higher Voltage Supply setting.

Altitude Setting

Select the option that matches your roasting location:

- Below 3,000 ft
- Above 3,000 ft

Altitude affects airflow and heat transfer during roasting. Selecting the correct setting helps improve roast consistency.

Language Selection

Select the language used within the Roast-Tech software interface.

Changing the language affects only software menus, labels, and messages. Roaster operation and roast settings are not affected.

Graph Display Preferences

Roast-Tech allows you to customize the appearance of the roast graph.

Available options include:

- Fahrenheit (°F) display
- Celsius (°C) display
- Graph with a reference roast curve
- Graph without a reference roast curve

Note: Reference roast curves are provided as a guide only.

Firmware Updates

When a firmware update is available:

1. Follow the on-screen instructions to install the update.
2. Do not unplug the roaster or close Roast-Tech until the update is complete.

ROAST PROFILE MANAGEMENT:

Select Roast Profiles from the lower-left corner of the Roast-Tech main screen to open the Roast Profile Management window.

Each profile contains fan and heat settings for the roasting process. Only one roast profile can be stored on the SR900 at a time. Sending a new profile replaces the profile currently stored in the roaster.

The Roast Profile Management window contains two primary sections:

- Levels & Timing – Displays and edits fan and heat settings for each stage of the roast.
- Profile Details – Displays profile information, notes, and status.

Available actions include:

- Send Profile to Roaster
- Load Profile
- Save Profile
- Delete Profile
- Import Summary
- Cancel Edits

Editing a Roast Profile

1. Open the Roast Profile Management window.
2. Select the profile to be modified.
3. Adjust the desired fan and heat settings.
4. Select Save Profile when finished.

Note: Changes do not take effect until Send Profile to Roaster is selected.

Sending a Profile to the Roaster

1. Select Send Profile to Roaster.
2. Confirm NEW PROFILE ACCEPTED appears, and the On Roaster indicator displays Yes. Only accepted profiles can be used for a Profile Roast.

Loading a Profile

1. Select Load Profile.
2. Choose the desired profile file.
3. Select Open.

The profile will be loaded into Roast-Tech and may be reviewed, edited, or sent to the roaster.

Saving a Profile

1. Select Save Profile.
2. Enter a profile name.
3. Select Save.

Saved profiles are stored on the local device for future use.

Deleting a Profile

1. Select Delete Profile.
2. Choose the profile to remove.
3. Confirm the deletion.

Deleting a profile removes it from the device but does not affect the profile currently stored on the SR900.

Importing a Roast Summary

The Import Summary feature creates a roast profile from a previously saved roast summary file.

1. Select Import Summary.
2. Choose the desired roast summary file.
3. Review the imported profile.
4. Save or modify the profile as desired.

This feature can be used to convert a successful manual roast into a repeatable roast profile.

Verifying the Active Profile

Before starting a Profile Roast:

- The desired profile is selected.
- The On Roaster indicator displays Yes.
- NEW PROFILE ACCEPTED appears after the profile is sent to the roaster.

Auto Stop Roast

Auto Stop Roast automatically transitions the SR900 into the cooling cycle when the selected roast temperature is reached.

Available settings include:

- Off
- Light Roast (410°F)
- City Roast (420°F)
- Medium Roast (430°F)
- Full City Roast (440°F)
- Vienna Roast (450°F)
- French Roast (470°F)

If the selected temperature is not reached before the roast timer expires, the roaster enters the cooling cycle when the timer ends.

Important: Auto Stop is a roast-endpoint feature, not a safety system. Users must monitor the roast at all times.

CLEANING & MAINTENANCE:

Regular cleaning helps maintain proper airflow, consistent roasting performance, and reliable operation of the SR900.

Chaff Basket

Clean the chaff basket after each roast.

1. Remove the chaff basket from the roaster.
2. Empty the collected chaff into a non-flammable container.
3. Verify that the chaff basket is free of debris before reinstalling it.

Note: Do not operate the roaster with a clogged, damaged, or improperly installed chaff basket.

Roast Chamber, Top Cap, Chaff Basket & Temperature Probe

1. Remove the roast chamber, top assembly, and bean temperature probe.
2. Wipe with a dry or slightly damp cloth and dry completely before reassembly.

Caution:

- Do not immerse any components in water.
- Do not place any components in a dishwasher.

Exterior Surfaces

1. Wipe exterior surfaces with a dry or slightly damp cloth.

Caution: Do not use abrasive cleaners or solvents, and do not allow liquids to enter the controls or ventilation openings.

Base Unit Chaff Accumulation

Chaff may collect inside the base during normal use. Remove loose chaff from accessible areas using a small household vacuum.

Caution:

- Do not disassemble the roaster.
- Do not insert tools or objects into the unit.

Inspection and Service

Periodically inspect the roaster for:

- Excessive chaff buildup
- Damaged components
- A damaged power cord

The SR900 contains no user-serviceable internal parts. If it does not operate normally, stop using it and contact an authorized service provider.

Maintenance Reminder

Failure to clean the SR900 regularly may result in reduced performance, restricted airflow, increased smoke production, or inconsistent roasting results.

STORAGE & HANDLING:

To prevent damage, do not move the SR900 while fully assembled, as the top cap and chaff basket are not locked in place.

Moving the Roaster

Before relocating the roaster, even for short distances:

1. Power off the roaster and allow all components to cool to room temperature.
2. Remove the top cap and chaff collector. Remove the roast chamber, if necessary.
3. Move the base unit and removable components separately.

Caution: Do not lift or carry the roaster by the top cap, chaff collector, or roast chamber.

Storage

When the roaster is not in use:

1. Store the SR900 in a clean, dry, safe indoor location that prevents tipping, falling, or impact damage.
2. Ensure all components are clean and completely dry before storage.

Caution: Do not store the roaster in outdoor, damp, or high-humidity environments.

Handling Reminder

Moving the SR900 while fully assembled may cause components to loosen or fall, resulting in damage or injury. Always transport the base unit and removable components separately.

TROUBLESHOOTING:

Issue	Possible Cause / Corrective Action
Roaster Will Not Power On	• Confirm the roaster is plugged directly into a properly grounded 120 V AC wall outlet. • Verify that the wall outlet is supplying power. • Press and briefly hold the “ON / HOLD OFF” button. • If the roaster still does not power on, discontinue use and contact an authorized service provider.
Roast Does Not Start	• Press and briefly hold the “START / COOL” button to begin the roast cycle. • If using Roast-Tech software, confirm that the roaster is connected, the BLE indicator on the SR900 is illuminated, and the software shows an active connection.
Roaster Enters Cooling Mode Unexpectedly	• The programmed roast time may have expired. • If Auto Stop is enabled, one or more programmed stop conditions may have been reached. • If unexpected cooling continues to occur, discontinue use and contact authorized service.
Roast-Tech Software Will Not Connect (Bluetooth)	• Confirm that Bluetooth is enabled on the compatible device. • Ensure the roaster is powered on and within Bluetooth range. • Close and reopen the Roast-Tech software, then attempt to reconnect. • Verify that no other device or application is currently connected to the roaster.
Bluetooth Connected but No Data Is Updating	• Confirm that the Communication indicator LED (two-arrow icon) is illuminated. • Ensure that no other software application is attempting to communicate with the roaster. • Restart the Roast-Tech software and reconnect to the roaster. • If the issue persists, power cycle the roaster and reconnect.

Issue	Possible Cause / Corrective Action
Excessive Smoke	• Ensure the chaff collector is clean and properly installed. • Verify that adequate ventilation is provided. • Confirm that coffee beans are actively moving within the roast chamber and are not stagnant. • Excessive smoke may occur if the roaster is overloaded, fan speed is too low, or heat settings are too high. • Reduce heat and / or increase fan speed as needed to restore proper bean circulation. • If smoke continues to increase, press "START / COOL" to begin the cooling cycle.
Unusual Noises or Odors	• Stop the roast and initiate the cooling cycle. • If the condition continues, unplug the roaster. • Allow the roaster to cool completely. • Inspect the roaster for visible damage, obstructions, or foreign material. • If the issue persists, discontinue use and contact authorized service.
Temperature Readings Appear Incorrect	• Confirm that the bean temperature probe is fully inserted and properly connected. • Inspect the probe for contamination, residue buildup, or physical damage. • If temperature readings remain abnormal, discontinue use and contact authorized service.

Note: Proper bean movement is essential for safe roasting. Beans that are not circulating properly can overheat rapidly and produce excessive smoke.

WARRANTY:

The Fresh Roast SR900 is covered by a one (1) year limited warranty against defects in materials and workmanship under normal household use.

This warranty applies only when the roaster is operated in accordance with the instructions provided in this manual. Use outside the intended scope, including improper operation, modification, or unauthorized repair, may void the warranty.

Warranty coverage does not include damage resulting from:

- Misuse or abuse
- Improper cleaning or maintenance
- Inadequate ventilation
- Electrical supply issues
- Unauthorized modifications or repairs
- Normal wear and tear

For warranty claims, repair inquiries, or hardware-related support, contact:

Home Roasting Services LLC, DBA Home Roasting Supplies

Email: support@homeroastingsupplies.com

Service and Repairs

The Fresh Roast SR900 contains no user-serviceable internal parts.

- Do not disassemble the roaster.
- Do not attempt internal repairs or modifications.
- Unauthorized service may result in unsafe operation and will void the warranty.

If service is required, discontinue use immediately and contact the authorized support team.

Roast-Tech Software Support

Roast-Tech software and related services are supported separately from the Fresh Roast SR900 hardware.

For assistance with any of the following:

- Roast-Tech software operation
- User interface (UI) questions
- Bluetooth connectivity
- Roast profiles
- Firmware updates

Roast-Tech Support

Email: support@roast-tech.com